





17 Gallon, 1 Shelf, 2 Doors, Manual Close, Flammable Safety Cabinet, Sure-Grip® EX Piggyback, Yellow - 891700

Product Images

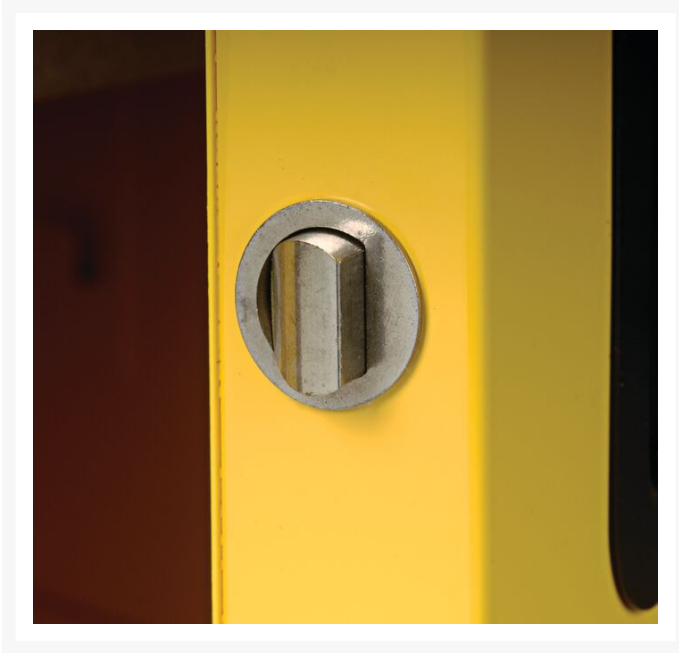

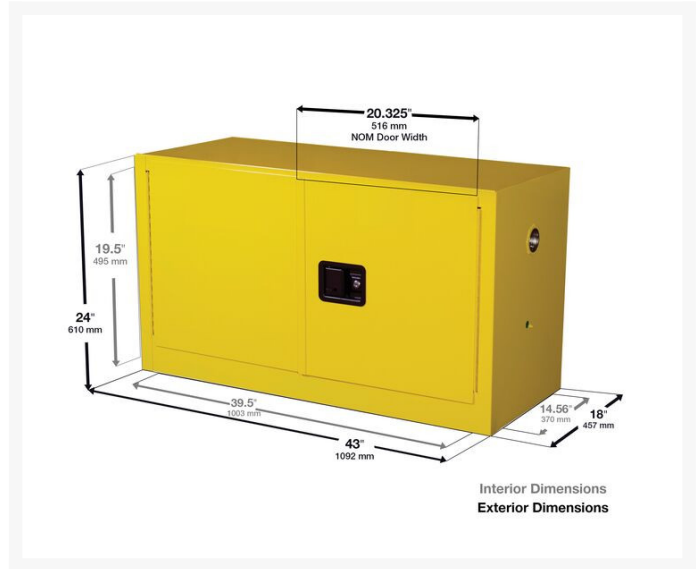

Short Description

- Increase storage capacity of flammable liquids by 17 gal (64 l) when floor space is limited
- Exterior dimensions of 24 in H x 43 in W x 18 in D (610 mm H x 1092 mm W x 457 mm D)
- Low height design allows for storage of flammables on bench tops or on top of 30 or 45 gal (114/170 l) cabinets
- Wall mountable with an optional wall hanger assembly (model 25950)
- Complies with OSHA, NFPA 30 and NFPA 1
- Fire tested and FM-approved
- Custom safety cabinets available, [get a quote here](#)

Description

The Justrite Sure-Grip® EX Piggyback Safety Cabinet with Manual Close Doors (model 891700) is designed for the storage and segregation of flammable liquids in lab, construction, or engineering settings. With exterior dimensions of 24 in H x 43 in W x 18 in D (610 mm H x 1092 mm W x 457 mm D), its low-height design allows you to expand available storage by 17 gal (64 l) without taking up valuable floor space.

Use independently on bench tops or stack on top of 30 or 45 gal (114/170 l) Justrite safety cabinets. It can also be mounted on a wall with an optional wall hanger assembly (model 25950).

Looking for a custom safety cabinet? [Request a quote here](#) for your storage requirements.

This yellow model is constructed with a sturdy 18-gauge (1-mm) thick steel double-wall, with 1.5 in (38 mm) of insulating air space for fire resistance. The fully welded, not riveted, construction holds the squareness of the unit for a longer life and offers greater protection in a fire since air gaps are reduced.

High-performance, manual-close, self-latching doors (fail safe, 3-point stainless steel) open to a full 180 degrees and close securely for maximum protection under fire conditions when pushed shut. Continuous piano hinges ensure the doors close smoothly every time.

For added security, each cabinet comes with an innovative U-Loc™ handle that does not require manual rotation to engage the mandatory latch. Cabinets include a cylinder lock and key set, or you can choose to use your own padlock. Haz-Alert™ reflective warning labels that read “FLAMMABLE – KEEP FIRE AWAY” are highly visible under fire conditions or during power outages when illuminated with a flashlight.

Model 891700 features one patented, galvanized steel SpillSlope® shelf designed to direct spills to the back and bottom into a 2-in (51-mm) leak-tested sump that meets EPA requirements. Adjustable on 3-in (76-mm) centers, all SpillSlope shelves meet ANSI MH28.1 standards with a 350-lb (159-kg) safe allowable load. Welded shelf hangers interlock with the shelf to offer maximum stability with no flimsy brackets to lose. For replacement shelves, use model 29937.

The cabinet also features dual vents with flame arresters, four adjustable self-leveling feet, and a built-in grounding connector. Its durable lead-free epoxy/polyester powder-coat finish provides excellent chemical resistance inside and out, as well as minimizes the effects of corrosion and humidity.

Justrite supplies more than 300 safety cabinet models ranging from 4- to 115-gal (15- to 435-l), to meet a versatile range of safety, compliance, and storage requirements.

All Justrite cabinets carry a 10-year warranty. Model 891700 is tested and approved by FM Approvals. It complies with OSHA, NFPA 30, and NFPA 1 requirements.

Safety Considerations for Piggyback Flammable Cabinets

The requirements for handling and storing chemicals are complex and depend on how flammable the liquid is. There is no room for error, so it is critical to choose a safety cabinet that has been independently tested to meet the standards of your industry and local jurisdictions. Not just any safety cabinet will do. Justrite flammable cabinets are best in class and are trusted within a wide range of industrial settings across the world, including laboratories, manufacturing, oil refineries, chemical processing plants and more.

For more information, please consult our workplace safety article about the [requirements for flammable liquid storage](#).

Specifications

Model No	891700
UPC	697841112735
International Model No.	8917001
Color	Yellow
Pallet Quantity	4
Material Specifications	18-Gauge Steel
FM Approval	Yes
OSHA Compliance	Yes
Complies with NFPA Code 30	Yes
Capacity	17 gallon
Liter Capacity	64
Number of Doors	2
Door Type	Manual
Number of Shelves	1
Adjustable Shelves	Yes
Dimensions, Exterior	24" H x 43" W x 18" D
	610mm H x 1092mm W x 457mm D
Dimensions, Interior	19.5" H x 39.5" W x 14.6" D
	495mm H x 1003mm W x 370mm D
Height (Inches)	24
Width (Inches)	43
Depth	18
Net Weight, lbs	123.7
Net Weight, kg	56.1