

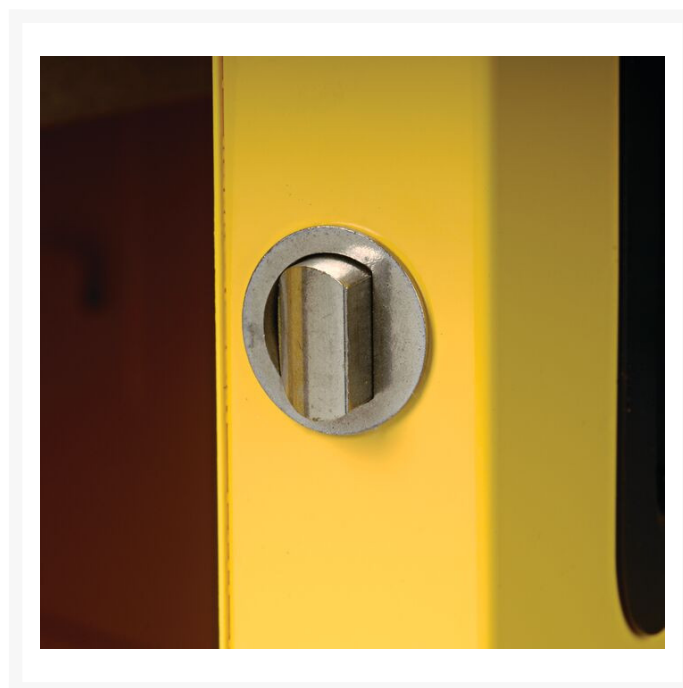


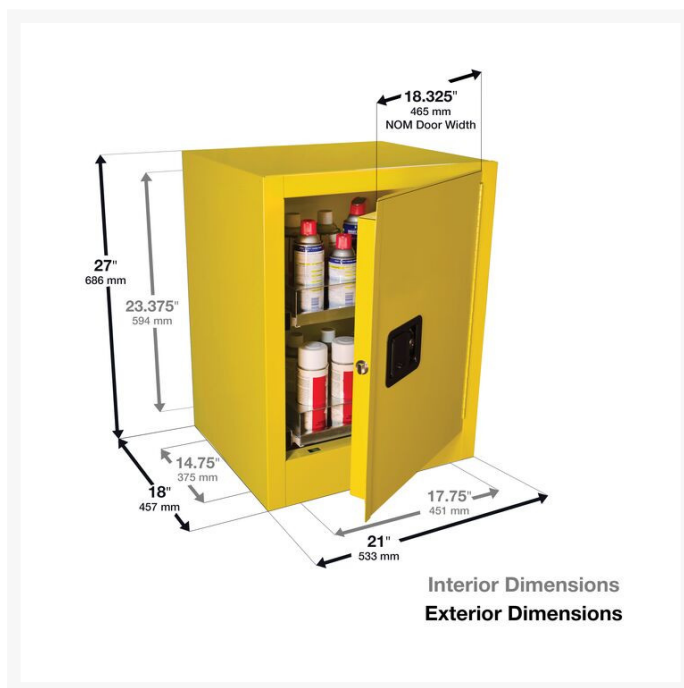

1 Door, Manual Close, 2 Drawers, 24 Can Benchtop Flammable Cabinet, Sure-Grip® EX, Yellow - 890500

Product Images

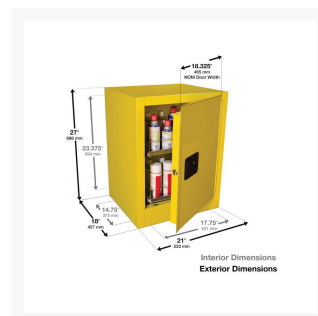

Short Description

- Protect workers
- Reduce fire risks
- Meet safety codes
- Ten-year warranty
- Capacity: 24 aerosol cans

Description

Justrite's Aerosol Can Benchtop Safety Cabinet fits virtually anywhere for hassle-free organization of up to twenty-four aerosol cans. Cabinet features 24-gauge galvanized steel roll-out shelves with "easy-glide" plastic rollers and stop guard protection. Two fixed position shelves, with twelve 2¾ in. (70mm) diameter openings, accept cans up to 10 in. (254mm) tall and are removable for easy cleaning. These cabinets have all the great features and benefits of our classic cabinets as outlined below.

Protect workers, reduce fire risks, and improve productivity by storing flammable fuels and chemicals in code-compliant safety cabinets. Designed to meet OSHA and NFPA standards, Sure-Grip® EX cabinets are constructed of sturdy 18-gauge (1-mm) thick double-wall, welded steel with 1-1/2 in. (38-mm) of insulating air space for fire resistance. High-performance, self-latching doors close easily and securely for maximum protection under fire conditions. Fail-safe closing mechanism ensures three-point stainless steel bullet latching system works every time.

For added security, U-Loc™ handle comes with a cylinder lock and key set or accepts an optional padlock. Haz-Alert™ reflective warning labels are highly visible under fire conditions or during power outages when illuminated with a flashlight.

Cabinets feature a leakproof 2 in. (51-mm) bottom sump, four adjustable self-leveling feet, grounding connector and trilingual warning label. Durable lead-free epoxy/polyester powder-coat finish provides excellent chemical resistance.

Cabinets come with a ten-year warranty.

Specifications

Model No	890500
UPC	697841112209
International Model No.	8905001
Color	Yellow
Pallet Quantity	12
Material Specifications	18-Gauge Steel
OSHA Compliance	Yes
Complies with NFPA Code 30	Yes
Number of Doors	1
Door Type	Manual
Number of Shelves	1
Adjustable Shelves	Yes
Dimensions, Exterior	27" H x 21" W x 18" D
	686mm H x 533mm W x 457mm D
Dimensions, Interior	23.4" H x 17.8" W x 14.8" D
	594mm H x 451mm W x 375mm D
Height (Inches)	27
Width (Inches)	21
Depth	18
Net Weight, lbs	91.0
Net Weight, kg	41.3