



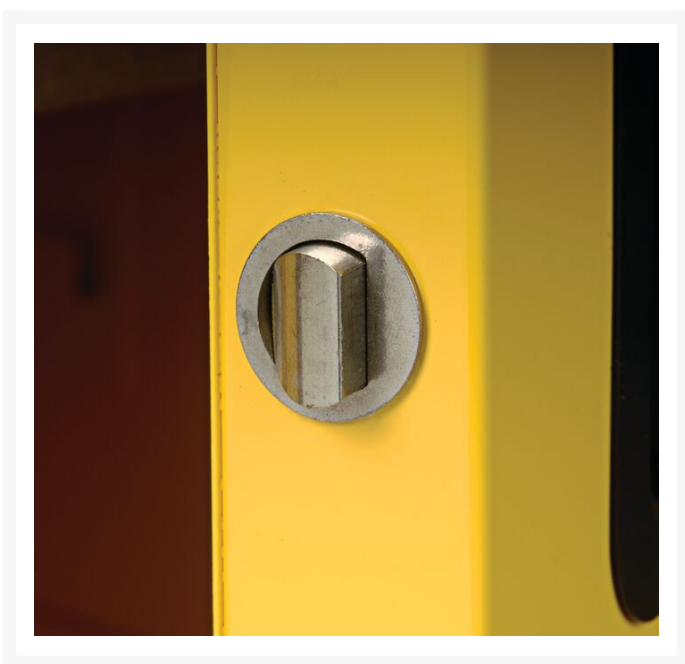

20 Gallon, 3 Shelves, 2 Doors, Manual Close, Wall Mount Flammable Cabinet, Sure-Grip® EX, Yellow - 893400

Product Images

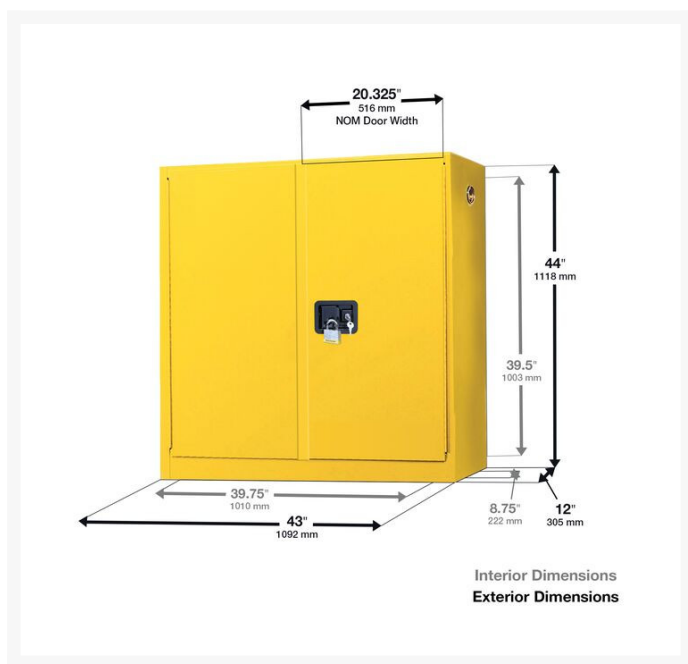

Short Description

- Hang cabinet above workbench for easy access
- Protect workers
- Reduce fire risks
- Meet safety codes
- Ten-year warranty

Description

Gain storage space near work areas without taking up extra floor space. Eye-level positioning allows for easy access to solvents. Model 893400 features three adjustable shelves to accommodate multiple containers. Both sizes come complete with mounting hardware. These cabinets have all the great features and benefits of our classic cabinets as outlined below.

Protect workers, reduce fire risks, and improve productivity by storing flammable fuels and chemicals in code-compliant safety cabinets. Designed to meet OSHA and NFPA standards, Sure-Grip® EX cabinets are constructed of sturdy 18-gauge (1-mm) thick double-wall, welded steel with 1-1/2" (38-mm) of insulating air space for fire resistance. High-performance, manual-close, self-latching doors open to a full 180 degrees and close easily and securely for maximum protection under fire conditions when pushed shut. Fail-safe closing mechanism ensures three-point stainless steel bullet latching system works every time.

For added security, U-Loc™ handle comes with a cylinder lock and key set or accepts an optional padlock. Haz-Alert™ reflective warning labels are highly visible under fire conditions or during power outages when illuminated with a flashlight.

Patented SpillSlope® galvanized steel shelves direct spills to back and bottom of a leakproof 2" (51-mm) bottom sump. They adjust on 3" (76-mm) centers for versatile storage. Cabinets also feature dual vents with flame arresters, four adjustable self-leveling feet, grounding connector, and trilingual warning label. Durable lead-free epoxy/polyester powder-coat finish provides excellent chemical resistance.

All cabinets are FM approved and come with a ten-year warranty.

Specifications

Model No	893400
UPC	697841113695
International Model No.	8934001
Color	Yellow
Pallet Quantity	2
Material Specifications	18-Gauge Steel
FM Approval	Yes
OSHA Compliance	Yes
Complies with NFPA Code 30	Yes
Capacity	20 gallon
Liter Capacity	76
Number of Doors	2
Door Type	Manual
Number of Shelves	3
Adjustable Shelves	Yes
Dimensions, Exterior	44" H x 43" W x 12" D
	1118mm H x 1092mm W x 305mm D
Dimensions, Interior	39.6" H x 39.5" W x 8.8" D
	1006mm H x 1003mm W x 222mm D
Height (Inches)	44
Width (Inches)	43
Depth	12
Net Weight, lbs	188.5
Net Weight, kg	85.5