




30 Gallon, 1 Shelf, 1 Bi-Fold Self-Close Door, Flammable Cabinet, Sure-Grip® EX, Yellow - 893080

Product Images

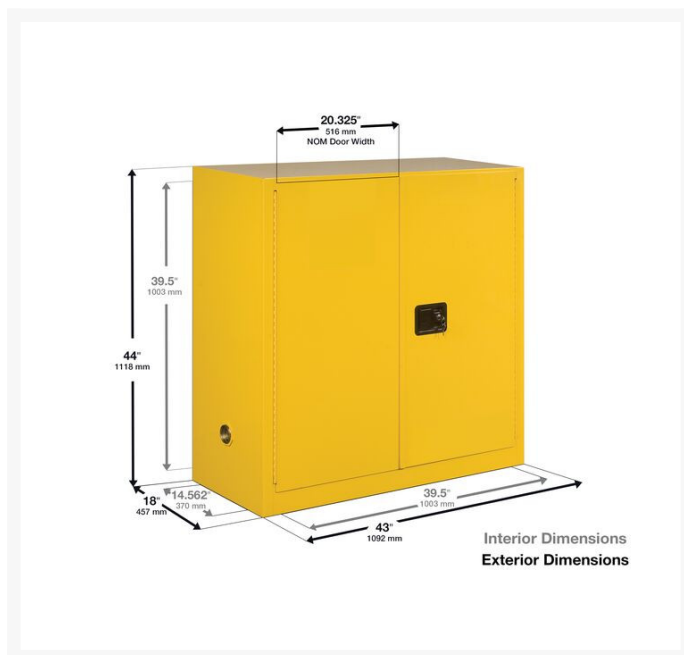

Short Description

- Protect workers
- Reduce fire risks
- Meet safety codes
- Ten-year warranty
- Multiple color options available

Description

Protect workers, reduce fire risks, and improve productivity by storing flammable fuels and chemicals in code-compliant safety cabinets. Designed to meet OSHA and NFPA standards, Sure-Grip® EX cabinets are constructed of sturdy 18-gauge (1-mm) thick double-wall, welded steel with 1-1/2" (38-mm) of insulating air space for fire resistance. High-performance, self-latching doors close easily and securely for maximum protection under fire conditions. Fail-safe closing mechanism ensures three-point stainless steel bullet latching system works every time.

For added security, U-Loc™ handle comes with a cylinder lock and key set or accepts an optional padlock. Haz-Alert™ reflective warning labels are highly visible under fire conditions or during power outages when illuminated with a flashlight.

Patented SpillSlope® galvanized steel shelves direct spills to back and bottom of a leakproof 2" (51-mm) bottom sump. They adjust on 3" (76-mm) centers for versatile storage. Cabinets also feature dual vents with flame arresters, four adjustable self-leveling feet, grounding connector, and trilingual warning label. Durable lead-free epoxy/polyester powder-coat finish provides excellent chemical resistance.

Manual-close door(s) opens to a full 180 degrees and self-latches when pushed closed. Self-close door(s) shuts and latches automatically when a fusible link melts at 165°F (74°C) under fire conditions. Unique, concealed self-closing mechanism offers obstruction-free access to contents.

All door styles meet OSHA and NFPA 30; self-close door styles also meet NFPA 1 and the International Fire Code.

Most cabinets are FM approved and all come with a ten-year warranty.

Specifications

Model No	893080
UPC	697841131484
International Model No.	8930801
Color	Yellow
Pallet Quantity	2
Material Specifications	18-Gauge Steel
FM Approval	Yes
OSHA Compliance	Yes
Complies with International Fire Code	Yes
Complies with NFPA Code 30	Yes
Complies with NFPA 1 Fire-Code	Yes
Capacity	30 gallon
Liter Capacity	114
Number of Doors	1
Door Type	Sliding, self-close
Number of Shelves	1
Adjustable Shelves	Yes
Dimensions, Exterior	44" H x 43" W x 18" D
	1118mm H x 1092mm W x 457mm D
Dimensions, Interior	39.6" H x 39.5" W x 14.6" D
	1006mm H x 1003mm W x 370mm D
Height (Inches)	44
Width (Inches)	43
Depth	18
Net Weight, lbs	224.0
Net Weight, kg	101.6