




30 Gallon, 1 Shelf, 2 Doors, Manual Close, 35"H Flammable Cabinet, Sure-Grip® EX, Yellow - 893300

Product Images



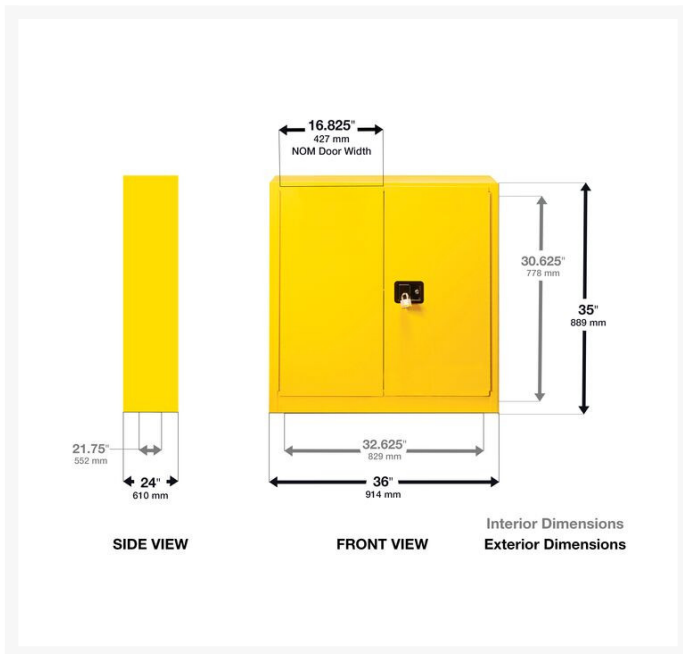

Short Description

- Designed for the safe storage of chemicals and flammable liquids
- Exterior dimensions of 35 in H x 36 in W x 24 in D (889 mm H x 914 mm W x 610 mm D)
- Storage capacity of 30 gal (114 L) of flammable liquids
- Fire-resistant, leak-tested design
- Complies with OSHA, NFPA 30 and NFPA 1
- Fire tested and FM-approved

Description

One of the leading causes of industrial fires is the improper storage and handling of flammable liquids. The Justrite Standard Sure-Grip® EX Flammable Safety Cabinet with Manual Close Doors (model 893300) is designed to safely store flammable liquids. Its exterior dimensions are 35 in H x 36 in W x 24 in D (889 mm H x 914 mm W x 610 mm D). These yellow cabinets can store 30 gal (114 L) of flammable liquids.

This model is constructed with a sturdy 18-gauge (1-mm) thick steel double-wall, with 1.5 in (38 mm) of insulating air space for fire resistance. The fully welded, not riveted, construction holds the squareness of the unit for a longer life and offers greater protection in a fire since air gaps are reduced.

High-performance, manual-close, self-latching doors (fail safe, 3-point stainless steel) open to a full 180 degrees and close securely for maximum protection under fire conditions when pushed shut. Continuous piano hinges ensure the doors close smoothly every time.

For added security, each cabinet comes with an innovative U-Loc™ handle that does not require manual rotation to engage the mandatory latch. Cabinets include a cylinder lock and key set, or you can choose to use your own padlock. Trilingual Haz-Alert™ reflective warning labels that read "FLAMMABLE – KEEP FIRE

AWAY” are highly visible under fire conditions or during power outages when illuminated with a flashlight.

Model 893300 features one patented, galvanized steel SpillSlope® shelf designed to direct spills to the back and bottom into a 2-in (51-mm) leak-tested sump that meets EPA requirements. Adjustable on 3-in (76-mm) centers, all SpillSlope shelves meet ANSI MH28.1 standards with a 350-lb (159-kg) safe allowable load. Welded shelf hangers interlock with the shelf to offer maximum stability with no flimsy brackets to lose. For replacement shelves, use model 29942.

The cabinet also features dual vents with flame arresters, four adjustable self-leveling feet, and a built-in grounding connector. Its durable lead-free epoxy/polyester powder-coat finish provides excellent chemical resistance inside and out, as well as minimizes the effects of corrosion and humidity.

Justrite supplies more than 300 safety cabinet models ranging from 4- to 115-gal (15- to 435-L), to meet a versatile range of safety, compliance, and storage requirements.

All Justrite cabinets carry a 10-year warranty. Model 893300 is tested and approved by FM Approvals. It complies with OSHA, NFPA 30, and NFPA 1 requirements.

Safety Considerations for Standard Safety Cabinets

The requirements for handling and storing chemicals are complex and depend on how flammable the liquid is. There is no room for error, so it is critical to choose a safety cabinet that has been independently tested to meet the standards of your industry and local jurisdictions. Not just any safety cabinet will do. Justrite flammable cabinets are best in class and are trusted within a wide range of industrial settings across the world, including laboratories, manufacturing, oil refineries, chemical processing plants, and more.

For more information, please consult our workplace safety article about the [requirements for flammable liquid storage](#).

Specifications

Model No	893300
UPC	697841113640
International Model No.	8933001
Color	Yellow
Pallet Quantity	2
Material Specifications	18-Gauge Steel
FM Approval	Yes
OSHA Compliance	Yes
Complies with NFPA Code 30	Yes
Capacity	30 gallon
Liter Capacity	114
Number of Doors	2
Door Type	Manual
Number of Shelves	1
Adjustable Shelves	Yes
Dimensions, Exterior	35" H x 36" W x 24" D
	889mm H x 914mm W x 610mm D
Dimensions, Interior	30.5" H x 32.8" W x 20.75" D
	775mm H x 833mm W x 527mm D
Height (Inches)	35
Width (Inches)	36
Depth	24
Net Weight, lbs	194.0
Net Weight, kg	88.0