




# 60 Gallon, 2 Shelves, 1 Bi-Fold Self Close Door, Flammable Cabinet, Sure-Grip® EX, Yellow - 896080

## Product Images



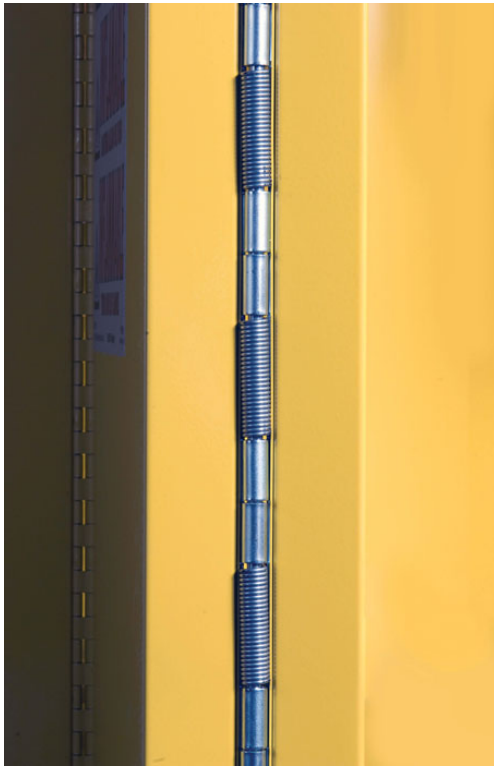

Interior Dimensions  
Exterior Dimensions

## Short Description

- Protect workers
- Reduce fire risks
- Meet safety codes
- Ten-year warranty
- Multiple color options available

## Description

Protect workers, reduce fire risks, and improve productivity by storing flammable fuels and chemicals in code-compliant safety cabinets. Designed to meet OSHA and NFPA standards, Sure-Grip® EX cabinets are constructed of sturdy 18-gauge (1-mm) thick double-wall, welded steel with 1-1/2" (38-mm) of insulating air space for fire resistance. High-performance, self-latching doors close easily and securely for maximum protection under fire conditions. Fail-safe closing mechanism ensures three-point stainless steel bullet latching system works every time.

For added security, U-Loc™ handle comes with a cylinder lock and key set or accepts an optional padlock. Haz-Alert™ reflective warning labels are highly visible under fire conditions or during power outages when illuminated with a flashlight.

Patented SpillSlope® galvanized steel shelves direct spills to back and bottom of a leakproof 2" (51-mm)

bottom sump. They adjust on 3" (76-mm) centers for versatile storage. Cabinets also feature dual vents with flame arresters, four adjustable self-leveling feet, grounding connector, and trilingual warning label. Durable lead-free epoxy/polyester powder-coat finish provides excellent chemical resistance.

Manual-close door(s) opens to a full 180 degrees and self-latches when pushed closed. Self-close door(s) shuts and latches automatically when a fusible link melts at 165°F (74°C) under fire conditions. Unique, concealed self-closing mechanism offers obstruction-free access to contents.

All door styles meet OSHA and NFPA 30; self-close door styles also meet NFPA 1 and the International Fire Code.

Most cabinets are FM approved and all come with a ten-year warranty.

## Specifications

---

Model No	896080
UPC	697841131507
International Model No.	8960801
Color	Yellow
Pallet Quantity	1
Material Specifications	18-Gauge Steel
FM Approval	Yes
OSHA Compliance	Yes
Complies with International Fire Code	Yes
Complies with NFPA Code 30	Yes
Complies with NFPA 1 Fire-Code	Yes
Capacity	60 gallon
Liter Capacity	227
Number of Doors	1
Door Type	Sliding, self-close
Number of Shelves	2
Adjustable Shelves	Yes
Dimensions, Exterior	65" H x 34" W x 34" D
	1651mm H x 864mm W x 864mm D
Dimensions, Interior	60.5" H x 30.8" W x 30.3" D
	1537mm H x 781mm W x 771mm D
Height (Inches)	65
Width (Inches)	34
Depth	34
Net Weight, lbs	376.0
Net Weight, kg	170.6